Safety Standard ISO 13849-1 Certified *2(Corresponding to Categories 2 to 4)

3-Port Solenoid Valve/ CE

Residual Pressure Release Valve with Detection of Main Valve Position

*2 Refer to page 2 for certified products.

Dual Residual Pressure Release Valve

Refer to page 2 for compliant products.

RoHS



Categories 3 and 4

When the dual residual pressure release valve is used, if one of the valves fails to operate, the other one releases the residual pressure.

Dual Residual Pressure Release Valve VP544-X538

With Soft Start-up Function VP544-X555



CAT.ES11-111B ®

3-Port Solenoid Valve/ Residual Pressure Release Valve with Detection of Main Valve Position VP/VG Series

With main valve position detection function (Category 2) With easy-to-construct redundant system (Categories 3 and 4) Category 2 The safety function only requires the use of a single channel and is automatically aory 3 The redundancy prevents the loss of the safety function when a single failure checked. occurs. The safety function must be checked before each use. An accumulation of undetected faults can cause the loss of the safety function. Category 4 The redundancy prevents the loss of the safety function when a single failure occurs. The safety function must be checked before each use. An accumulation of undetected faults does not affect the safety function. (Features a higher DC and MTTFd than Category 3) Monitoring L L1 Input signal Input signal 0 11 01 Logical operation ogical operation Output equipment Input equipment Output signal Input equipment Output equipment eauipment equipment Output signa Monitorina **Cross monitoring** Monitoring 12 Input signal 12 ΤE ΟΤΕ 02 Logical operation Testing equipment Output signal Input equipment Output of test result Output equipment equipment Output signa The main valve position detection function is used to detect When the dual residual pressure release valve is used, if one of the inconsistencies between input signals and valve operations. valves fails to operate, the other one releases the residual pressure. Input equipment (I): Detection equipment (sensor) of starting event Input equipment (I1, I2): Detection equipment (sensor) of starting event Logical operation equipment (L): Relay sequence circuit, PLC control program Logical operation equipment (L1, L2): Relay sequence circuit, PLC control program Output equipment (O): Solenoid valve, Electromagnetic switch, Output relay Output equipment (O1, O2): Solenoid valve, Electromagnetic switch, Output relay Recommended valve: VP54□/74□-X536 Recommended valve: VP544/744-X538, VG342-X87 Residual pressure release valve 2 Residual pressure release valve

VP542-X536

 
* This product is to be used as a component of a safety system; the safety of the equipment as a whole cannot be guaranteed by this single unit alone.

Safety limit

switch

Highly reliable construction

 The main valve position is detected by relaying the main valve's movements directly to the reed safety limit switch via the rod.




- ② Long service life: B10D: 10 million cycles*1
- 3 The return spring ensures the release of residual pressure regardless of the pressure level.
- *1 For the VP500/700, the safety limit switch made by OMRON

With soft start-up function (-X555)



- A function to gradually increase the initial pressure of the pneumatic system has been added to the dual residual pressure release valve.
- Fixed orifice and variable throttle are available as throttle options for adjusting the pressure increase. (Ø1, Ø1.5, Ø2)

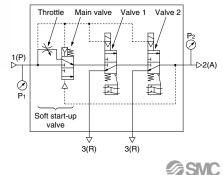

A variety of safety limit switches can be selected.



Residual pressure release valve (1)

Conduit (VP series only) and M12 connector (4 pin) types are available.




Safetv limit

switch

VP544-X538

An M12 connector type with 6 pins is available.

Output Pressure (P2) vs Time Graph

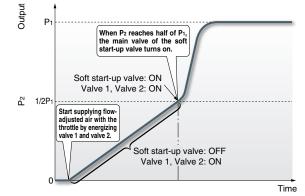


3-Port Solenoid Valve/ Residual Pressure Release Valve with Detection of Main Valve Position VP/VG Series

Standards and Enclosure

					Standards				
Model	Category	Safety limit switch	Machinery directive 2006/42/EC			CE/ UL/cUL		UL	
Model		manufacturer Ha		EN ISO 13849-1:2015 EN ISO 13849-2:2012	EN ISO 4414:2010	UKCA	Body ported	2000	RoHS
Residual Pressure Release Valve	2	OMRON Corporation						•	—
VP54□/74□-X536 Page 3		Rockwell Automation, Inc.		•				•	-
Dual Residual Pressure IP65	3, 4	OMRON Corporation		• •			-	•	—
VP544/744-X538 Page 3	0, 4	Rockwell Automation, Inc.		•	•			•	—
Dual Residual Pressure Release Valve with Soft Start-up Function [P65]	3, 4	OMRON Corporation		•	•		_	•	—
VP544/744-X555 Page 4	0, 4	Rockwell Automation, Inc.		•	•		_	•	—
Dual Residual Pressure Release Valve	3, 4	OMRON Corporation		•					—
VG342-X87 Page 23	0, 4	Rockwell Automation, Inc.		•	•			_	—

Series Variations

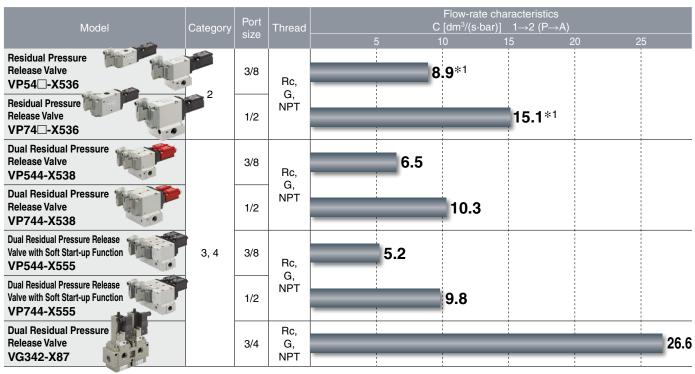


Can be connected to modular type F.R.L. units Page 20 Applicable models*1 •VP544/744-X536 •VP544/744-X538 •VP544/744-X555 *1 Please contact SMC for the VP542/742-X536. Filter regulator (Optional accessory) *1 For the body-ported type

For details on Safety Standard ISO 13849-1, refer to Guide to Products Conforming to International Standards on the SMC website.



3-Port Solenoid Valve/ Residual Pressure Release Valve with Detection of Main Valve Position *VP500/700-X536, X538, X555*



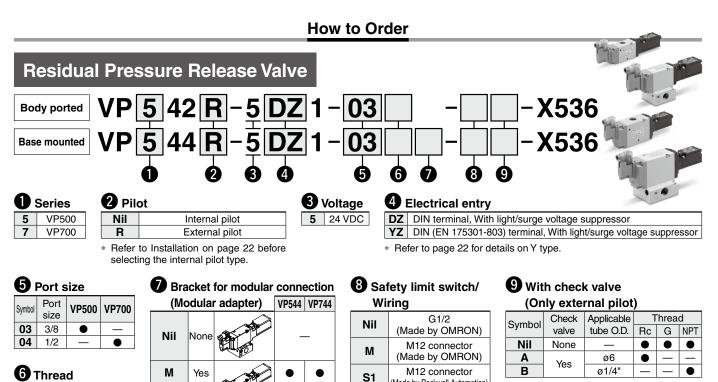

(Made by Rockwell Automation)

A check valve is installed on the external pilot port.

 Refer to Piping for External Pilot Type on page 5 for selection of the check valve.

Part Nos./With Modular Adapter

Rc

G

NPT

Nil

F

Ν

Applicable model	Ordering symbol	Combinable modular adapter part no.	Applicable spacer
VP544□-5□1-03	М	E310-U03	Y300-A, Y300T-A
VP544□-5□1-03	M1	E410-U03	Y400-A, Y400T-A
VP744□-5□1-04	М	E410-U04	Y400-A, Y400T-A

F

Ν

G

NPT


Nil

M

S1

Yes

М1

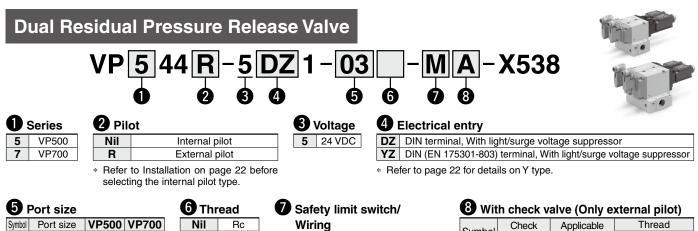

Sumbol	Check	Applicable	-	Thread			
Symbol	valve	tube O.D.	Rc	G	NPT		
Nil	None	—					
Α	Vaa	ø6		—	—		
В	Yes	ø1/4"	—	—			

* For the internal pilot, the symbol is nil.

 Refer to Piping for External Pilot Type on page 5 for selection of the check valve.



G1/2 (Made by OMRON)

M12 connector (Made by OMRON)

M12 connector

(Made by Rockwell Automation)


Symbol 03

04

3/8

1/2

Residual Pressure Release Valve with Detection of Main Valve Position **VP500/700-X536, X538, X555**

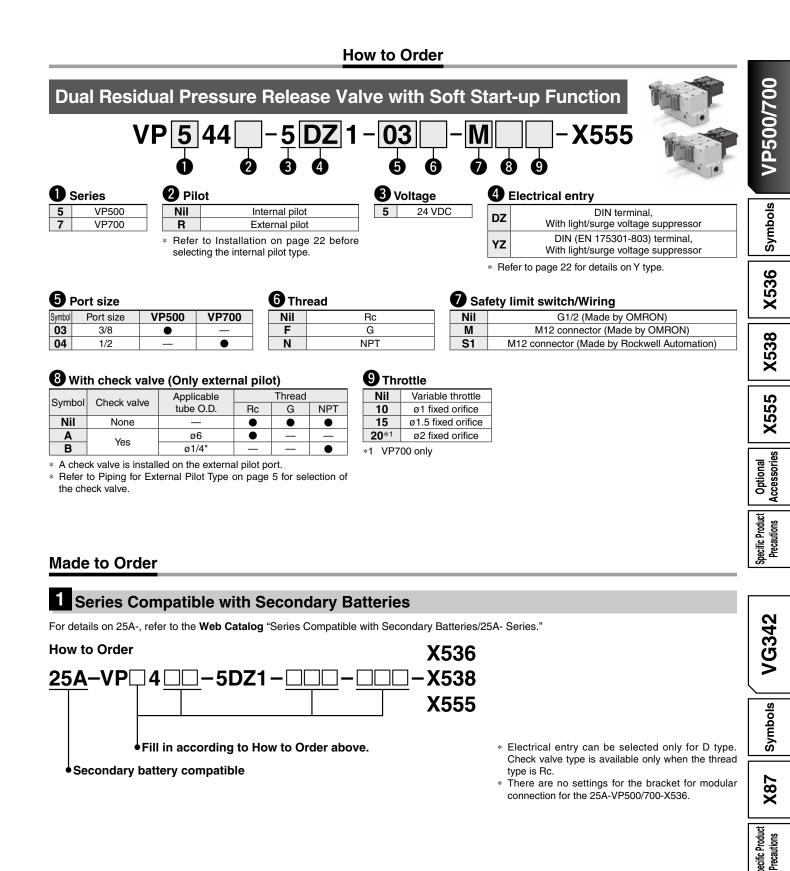

VP500/700-X536, X538, X555



Valve Specifications

Fluid	ΑΑ	ir			
Type of actuation	N.C. (Spri	ng return)			
Operation	Internal pilot	External pilot			
Operating pressure range	0.25 to 0.7 MPa 0.25 to 0.7 MPa				
External pilot pressure	O.25 to 0.7 MPa (Same as operating pre-				
Maximum operating frequency	30 cycles/minute				
Minimum operating frequency	1 cycle/week				
Operating and ambient temperatures	–10 to 50°C	(No freezing)			
Ambient humidity	20 to 90% RH (No condensation)				
Manual override	None				
Pilot exhaust	Individual exhaust				
Lubrication	Not required				
Mounting orientation	Unrestricted				
Impact/Vibration resistance	150/3	0 m/s ²			
Enclosure	IP65				
Operating environment	Inde	oors			
B10D (MTTFd calculation)	10,000,0	00 cycles			

Internal Pilot Type

▲ Caution

Even when the inlet pressure is within the operating pressure range, restricted piping, etc., may cause reduced flow on the inlet side, leading to the valve not operating properly. Refer to Installation in the Specific Product Precautions for details. Piping for External Pilot Type


A Caution

The product may not operate when the external pilot pressure is insufficient due to simultaneous operation or restricted air piping. In this case, use the check valve (AKH series) with the external pilot port, change the piping size or adjust the set pressure to provide a constant pressure of 0.25 MPa or more.

Flow-rate Characteristics / Weight

	Flow-rate characteristics							Woight [g]			
Model	1→2	2 (P→A)		2→3	B (A→R)		vveig	Weight [g]			
	C [dm3/(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv	М	S1			
VP542-X536	8.9	0.16	2.2	8.9	0.20	2.1	330	350			
VP544-X536	8.8	0.07	2.0	8.8	0.13	2.0	460	480			
VP742-X536	15.1	0.21	3.6	15.3	0.22	3.7	570	590			
VP744-X536	14.7	0.05	3.3	15.0	0.17	3.4	790	810			
VP544-X538	6.5	0.08	1.3	6.7	0.10	1.3	920	960			
VP744-X538	10.3	0.08	2.3	9.7	0.08	2.1	1520	1560			
VP544-X555	5.2	0.06	1.1	6.7	0.10	1.3	1300	1340			
VP744-X555	9.8	0.08	2.1	9.7	0.08	2.1	2180	2220			

Needle Valve / Flow-rate Characteristics (VP544/744-X555)

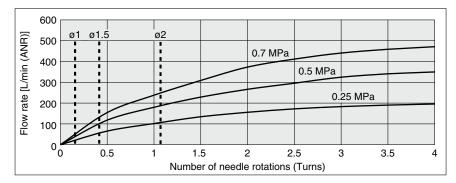

Solenoid Specifications

Electrical entry	DIN terminal
Rated voltage	24 VDC
Allowable voltage fluctuation	±10%
Power consumption	0.45 W
Surge voltage suppressor	Varistor
Indicator	LED

SMC

Safety Limit Switch Specifications

Manufacturer	OMRON	Rockwell Automation		
Electrical wiring	G1/2, M12 connector	M12 connector		
Contact resistance	25 m Ω or less	50 m Ω or less		
Min. applicable load	5 VDC, 1 mA (Load resistance)	5 VDC, 5 mA (Load resistance)		
Max. voltage	24 \	/DC		
Max. load current	50 mA			
Max. load inductance	0.5 H			
Insulation voltage	e 300 V 600 V			
Protection against electric shock	Class II (EN 60947-5-1:200			


Residual Pressure Release Valve with Detection of Main Valve Position **VP500/700-X536, X538, X555**

Symbols




Symbol Terminal/Pin Numbers (Built-in switch 2 N.C.)

2 4 (12) (32) (11) ① (31) ③

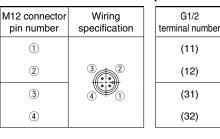


VP54 (R)/74 (R)-X536

 



Safety limit switch terminal [N.C.] M12 connector pin number G1/2 terminal number

VP544(R)/744(R)-X538

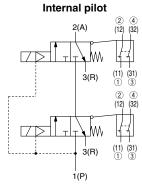

VP544(R)/744(R)-X555

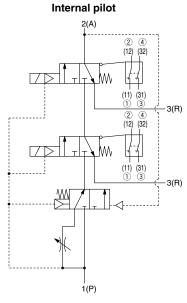

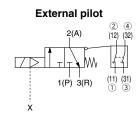

Wiring

specification

©₿`≥ŀ

10 ⊗¦₁

G1/2

(11)

(12)

(31)

(32)

Recommended Crimped Terminals

Manufacturer	Туре	Wiring size
J.S.T. Mfg. Co., Ltd.	FV0.5-3.7 (F type) V0.5-3.7 (Straight type)	AWG20 (0.5 mm²)

J.S.T. Mfg. Co., Ltd. is a Japanese manufacturer.

External pilot/With check valve

2(A)

1(P) 3(R)

х

② ④ (12) (32)

(11) (31) ③

Symbols X536 X538 X555 Optional Accessories

Specific Product

Precautions

VG342


Symbols

X87


Specific Product Precautions


VP500/700


External pilot/With check valve

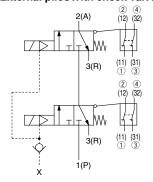

External pilot/With check valve

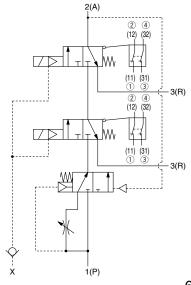

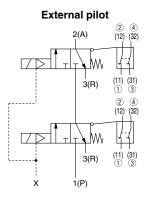

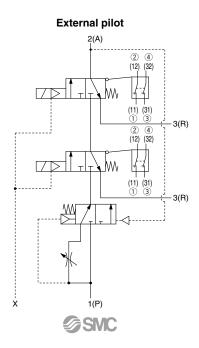

VP500/700-X536, X538, X555


Symbols

Safety limit switch
Made by
Rockwell Automation


Symbol

Pin Numbers (Built-in switch 3 N.C.)



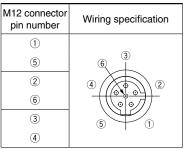


VP54□(R)/74□(R)-X536

 


M12 connector pin number


VP544(R)/744(R)-X538

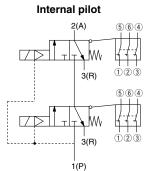

VP544(R)/744(R)-X555

 Internal pilot

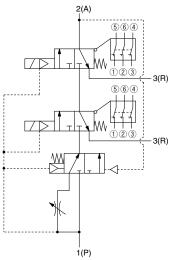




External pilot


2(A)

(5)(6)(4)

 
External pilot/With check valve




External pilot/With check valve

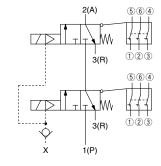


External pilot/With check valve

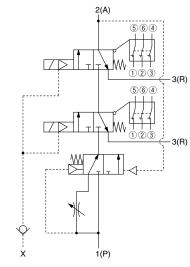

External pilot

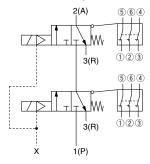


External pilot

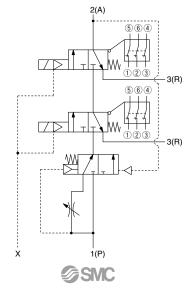




Safety Standard ISO 13849-1 Certified 3-Port Solenoid Valve/ Residual Pressure Release Valve with Detection of Main Valve Position

Dimensions

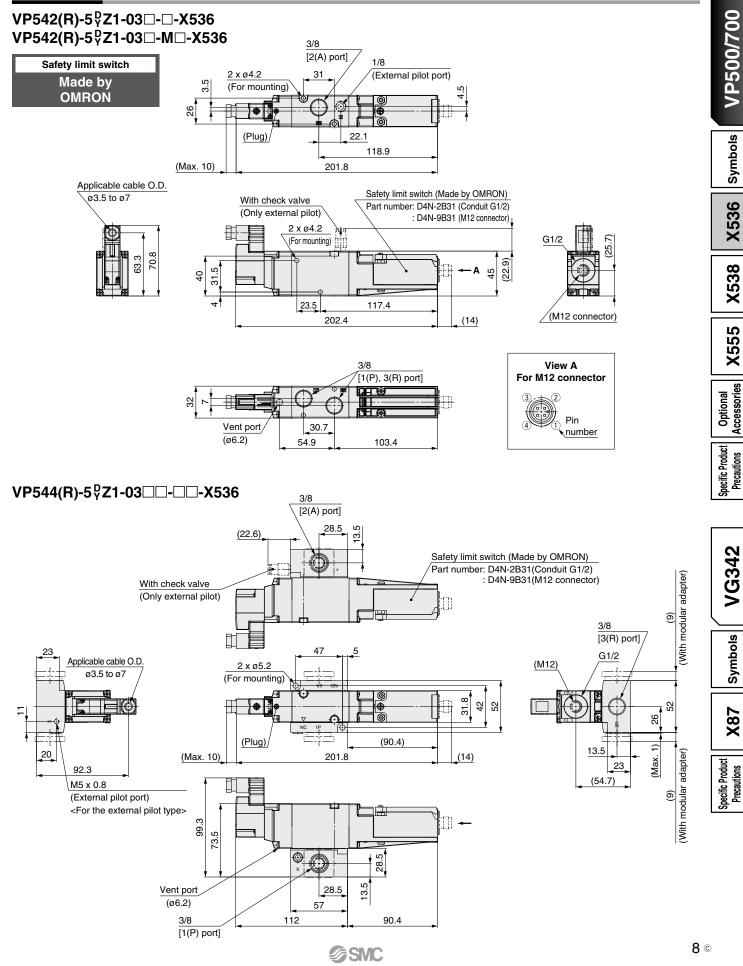


Dimensions

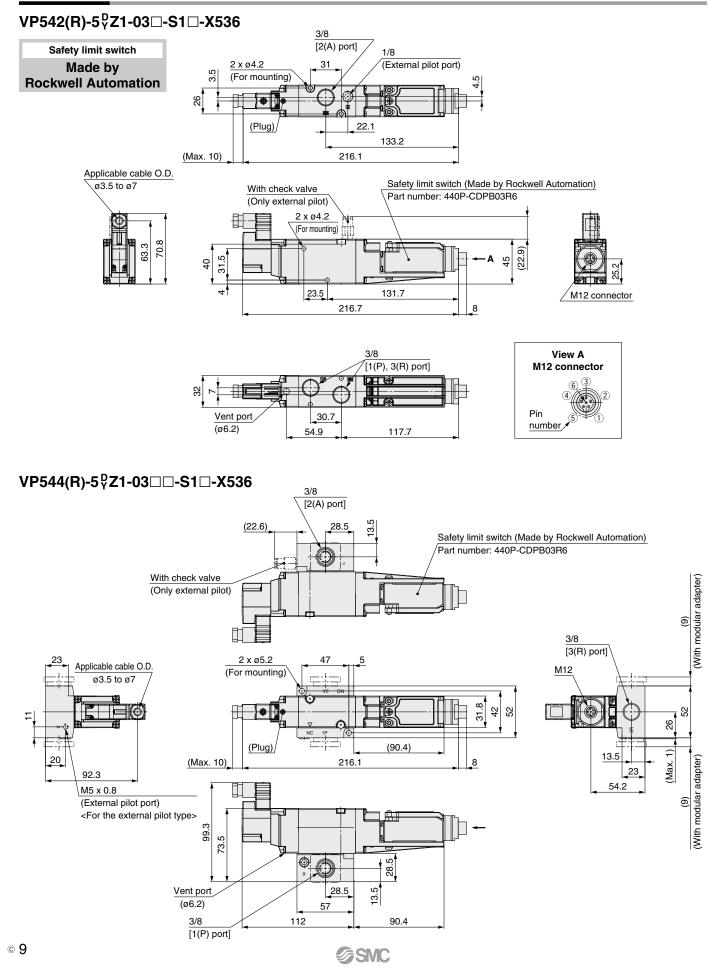


Safety Standard ISO 13849-1 Certified 3-Port Solenoid Valve/ Residual Pressure Release Valve with Detection of Main Valve Position

Dimensions

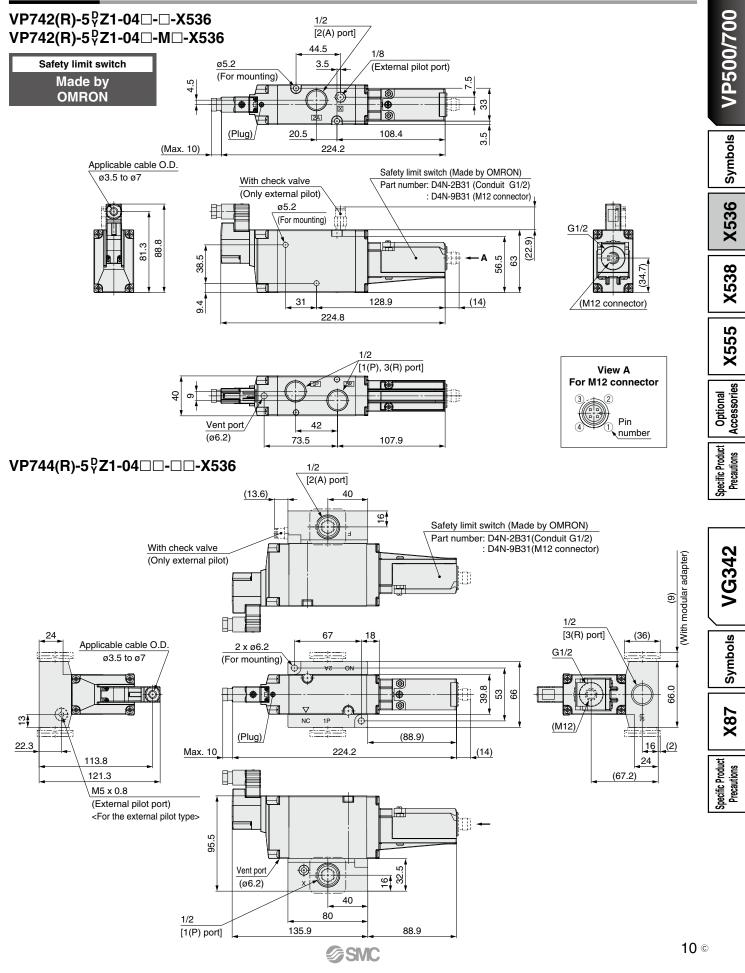


Dimensions

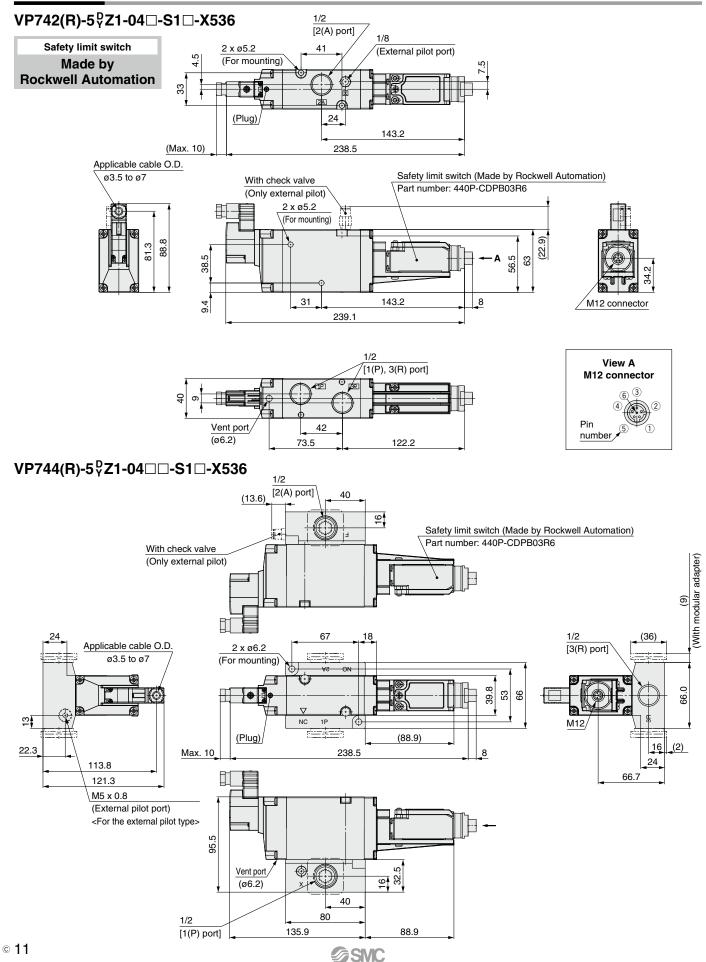

Safety Standard ISO 13849-1 Certified3-Port Solenoid Valve/Residual Pressure Release Valve with Detection of Main Valve Position

Dimensions

Dual Residual Pressure Release Valve (-X538)

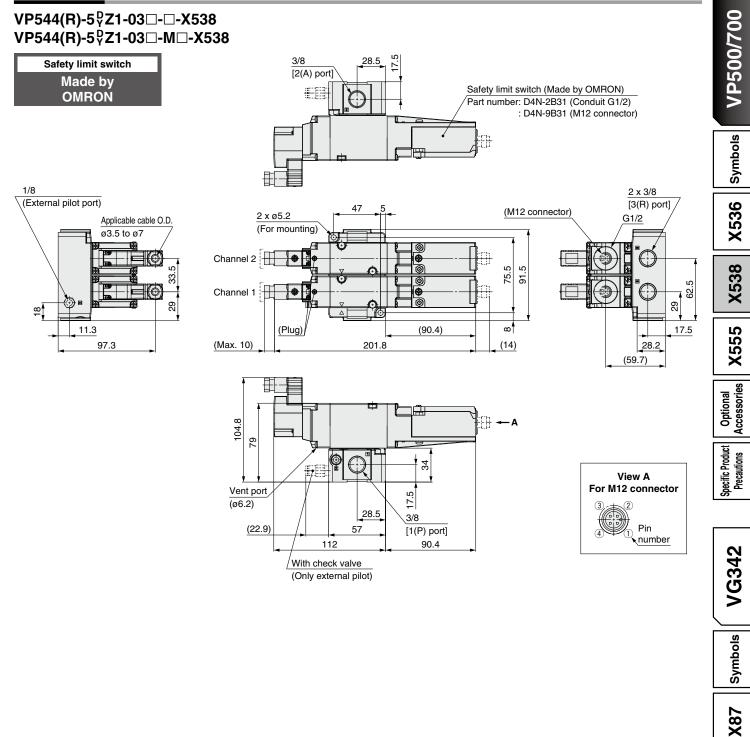


Specific Product Precautions

Dimensions

Dual Residual Pressure Release Valve (-X538)


VP544(R)-5[₽]₇Z1-03□-S1□-X538

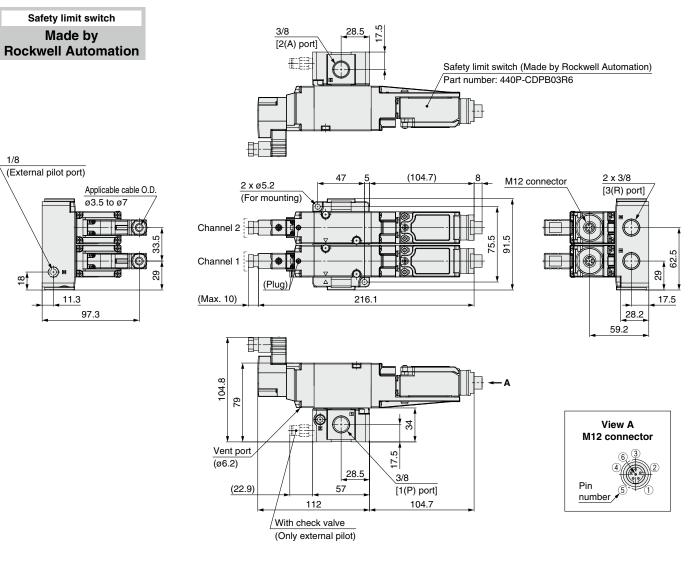

3-Port Solenoid Valve/ VP500/700-X538 Residual Pressure Release Valve with Detection of Main Valve Position

Dimensions

Safety Standard ISO 13849-1 Certified

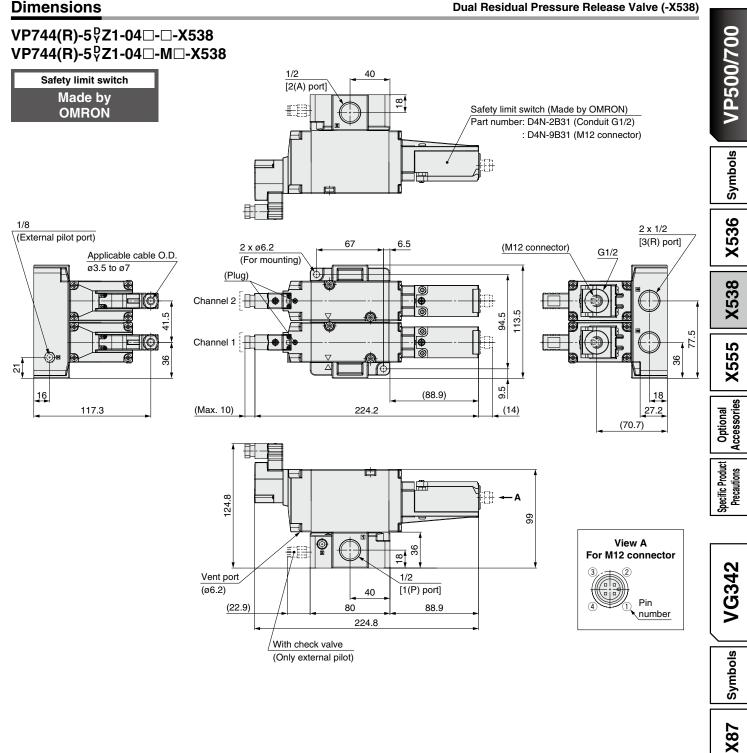


Specific Product Precautions

Dimensions

Dual Residual Pressure Release Valve (-X538)

VP744(R)-5[₽]₇Z1-04□-S1□-X538

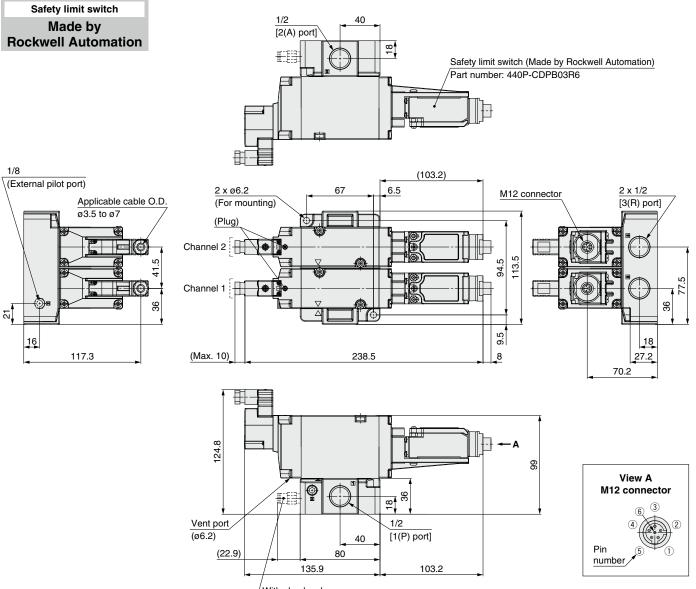


/With check valve (Only external pilot)

Safety Standard ISO 13849-1 Certified3-Port Solenoid Valve/Residual Pressure Release Valve with Detection of Main Valve Position

Dimensions

Dual Residual Pressure Release Valve with Soft Start-up Function (-X555)

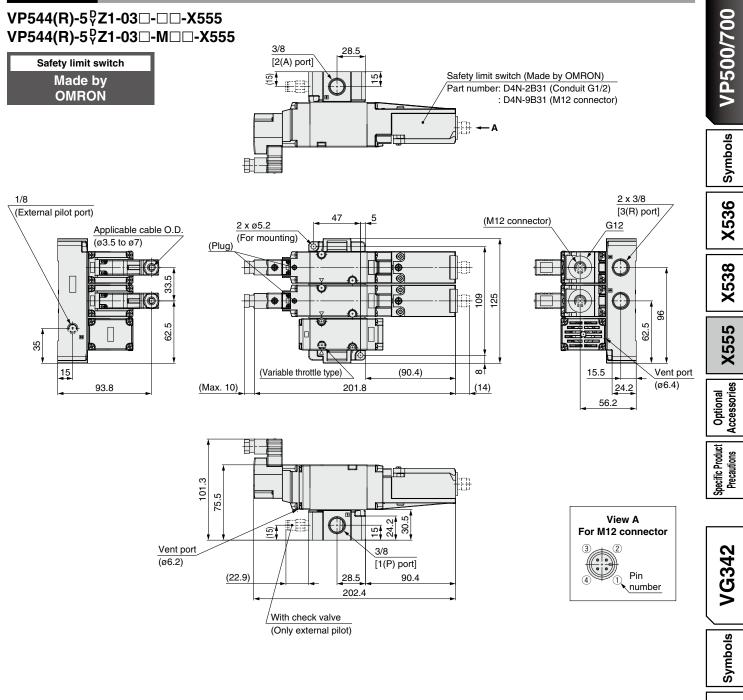


X87

Specific Product Precautions

Dimensions

Dual Residual Pressure Release Valve with Soft Start-up Function (-X555)


VP544(R)-5[₽]₇Z1-03□-S1□□-X555

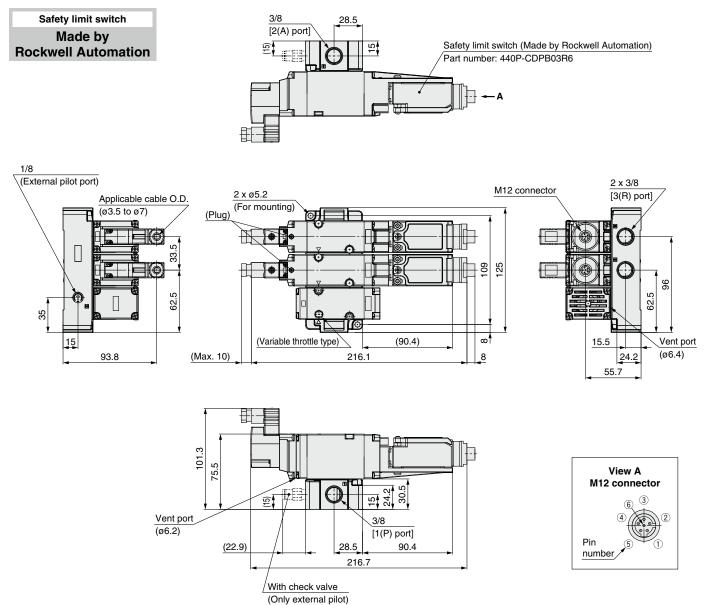

Safety Standard ISO 13849-1 Certified3-Port Solenoid Valve/Residual Pressure Release Valve with Detection of Main Valve Position

Dimensions

Dual Residual Pressure Release Valve with Soft Start-up Function (-X555)

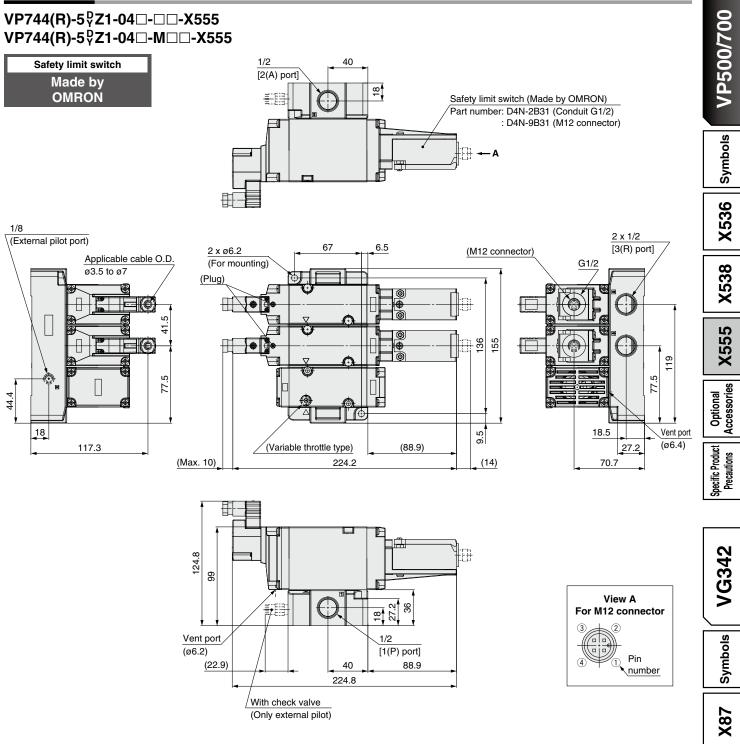


Specific Product Precautions


Dimensions


Dual Residual Pressure Release Valve with Soft Start-up Function (-X555)


VP744(R)-5^P₇Z1-04□-S1□□-X555



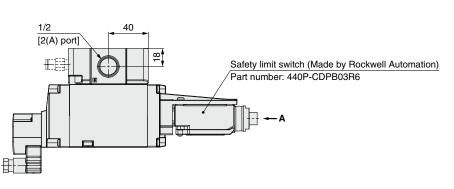

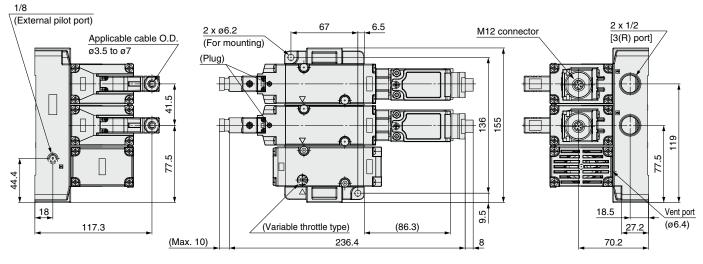

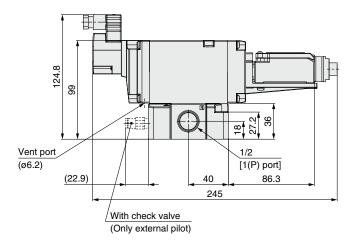

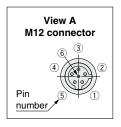


VP500/700-X536, X538, X555 **Optional Accessories**

For details on optional accessories, refer to the Web Catalog.

Piping Adapter: 3/8, 1/2

 
A piping adapter allows installation/removal of the component without removing the piping and thus makes maintenance easier.



Part no. *1	Port size	Α	В	D
E300-□03-A	3/8	31.8	30	30
E400-□04-A	1/2	31.8	36	36

*1 □ in part numbers indicates a pipe thread type. No indication is necessary for Rc; however, indicate N for NPT, and F for G.

* Separate interfaces are required for modular unit.

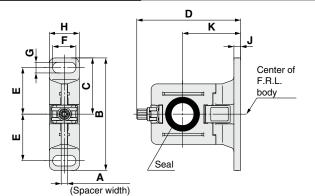

Spacer with Bracket


Part no.	Α	В	С	D	Е	F	G	Н	J	K
Y300T-A	4.2	82	41	71.5	35	14	7	19	4	41
Y400T-A	5.2	96	48	86.1	40	18	9	26	5	50


Ordering Example 1*1
Dual residual pressure release valve VP544-5DZ1-03-X555 1 pc.
Filter regulator AW30-03G-A 1 pc.
Spacer with bracket Y300T-A 3 pcs.
Piping adapter E300-03-A 2 pcs.

*1 Products do not come assembled.

Ordering Example 2*1
Residual pressure release valve/ Base mounted
VP544R-5DZ1-03M-X536 ··· 1 pc.
Filter regulator AW30-03G-A 1 pc.
Spacer with bracket Y300T-A 3 pcs.
Piping adapter E300-03-A 2 pcs.

*1 Products do not come assembled.

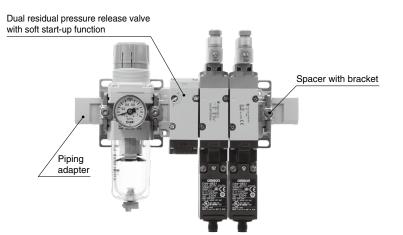

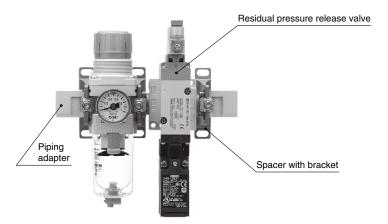




VP500/700

VP500/700-X536, X538, X555


Spacer with Bracket Mounting Position

Residual Pressure Release Valve (VP544/744-X536)

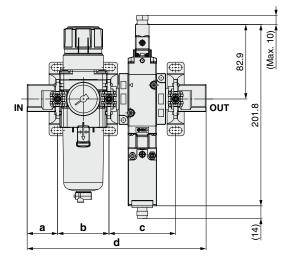


Model	а	b	С	d	Note
VP544R-5DZ1-03M□-X536	33.9	57.2	74.2	199.2	AW30-03G-A Y300T-A E300-03-A
VP744R-5DZ1-03M□-X536	34.4	75.2	89.2	233.2	AW40-04G-A Y400T-A E400-04-A

Dual Residual Pressure Release Valve (-X538)

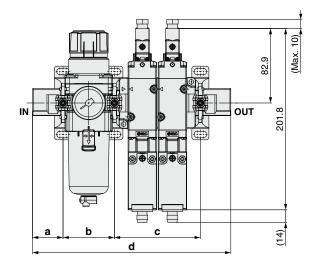

Model	а	b	С	d	Note
VP544R-5DZ1-03-X538	33.9	57.2	95.7	220.7	AW30-03G-A Y300T-A E300-03-A
VP744R-5DZ1-04-X538	34.4	75.2	118.7	262.7	AW40-04G-A Y400T-A E400-04-A

Dual Residual Pressure Release Valve with Soft Start-up Function (-X555)

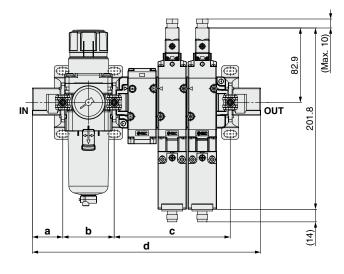

Model	а	b	С	d	Note
VP544-5DZ1-03-X555	33.9	57.2	129.2	254.2	AW30-03G-A Y300T-A E300-03-A
VP744-5DZ1-04-X555	34.4	75.2	160.2	304.2	AW40-04G-A Y400T-A E400-04-A



VP500/700-X536, X538, X555 Specific Product Precautions 1

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: http://www.smcworld.com

How to Use DIN Terminal Connector

▲ Caution

Connection

- 1. Loosen the holding screw and pull the connector out of the solenoid valve terminal block.
- After removing the holding screw, insert a flat blade screwdriver, etc., into the notch on the bottom of the terminal block and pry it open, separating the terminal block and the housing.
- 3. Loosen the terminal screws (slotted screws) in the terminal block. Insert the lead core wires into the terminals according to the connection method, and secure the wires by re-tightening the terminal screws.
- 4. Secure the cord by fastening the gland nut.

A Caution

When making connections, please note that using a heavy-duty cord of a size outside of the range of supported sizes (\emptyset 3.5 to \emptyset 7) will not satisfy IP65 (enclosure) standards. Also, be sure to tighten the gland nut and holding screw within their specified torque ranges.

Changing the entry direction

After separating the terminal block and housing, the cord entry direction can be changed by rotating the housing in the desired direction (4 directions at 90° intervals).

* When equipped with a light, be careful not to damage the light with the cord's lead wires.


Precautions

Plug in and pull out the connector vertically without tilting it to one side.

Compatible cable

Cord O.D.: ø3.5 to ø7

(Reference) 0.5 mm², 2-core or 3-core, equivalent to JIS C 3306

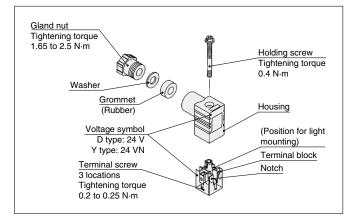

"Y" type

 
The Y type DIN connector is in compliance with the DIN standard of a 8 mm pitch between terminals.

- It is not interchangeable with the D type DIN connector with a 9.4 mm pitch between terminals.
- To distinguish it from the D type DIN connector, "N" is listed at the end of voltage symbol.
- The dimensions are the same as those of the D type DIN connector.

Light/Surge Voltage Suppressor

DIN Terminal

With light (DZ) (YZ)



There is no polarity.

* The varistor surge voltage suppressor has residual voltage corresponding to the protective element and rated voltage; therefore, protect the controller side from the surge voltage.

Limit Switch Cable

An OMRON or Rockwell Automation M12 connector limit switch cable is available.

M12 Connector Cable (4 Pins) Made by OMRON

Part number	Cable length [mm]
ZS-37-L	300
ZS-37-M	500
ZS-37-N	1000
ZS-37-P	2000
ZS-37-C	5000

Wire color by terminal no.

M12 pin no.	Lead wire color
1	Brown
2	White
3	Blue
(4)	Black

M12 Connector Cable (6 Pins) Made by Rockwell Automation


Part number	Cable length [mm]		
VP500-231-1	/P500-231-1 2000		

Rockwell Automation part number: 889R-F6ECA-2

Wire color by terminal no.

M12 pin no.	Lead wire color
1	Red/White
2	Red
3	Green
(4)	Red/Yellow
5	Red/Black
6	Red/Blue

 • We recommend using one of the straight type M12 connector cables shown above. If the L type is used, the cable entry direction will not be fixed.



SMC

Symbols

X536

X538

X5555

ccessories



VP500/700-X536, X538, X555 Specific Product Precautions 2

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: http://www.smcworld.com

Installation

- 1. Use the external pilot type when using the VP500/700-X536 or X538 with the AV series. Install the AV series on the primary side.
- 2. For the VP500/700-X536 and X538 internal pilot type, even when the inlet pressure is within the operating pressure range, restricted piping, etc., may cause reduced flow on the inlet side, leading to the valve not operating properly.
 - The recommended piping size is 3/8" for the VP500 and 1/2" for the VP700. Also, use piping with an I.D. of 10 mm or larger for the VP500, and 13 mm or larger for the VP700.
 - When selecting a regulator or a filter regulator, use piping larger than the recommended size with sufficient flow rate characteristics.
 - For extended piping between the regulator and the valve (inlet piping), keep piping as short as possible (1 m or less).
 - For use under conditions other than those listed above, please use the external pilot type.
- 3. When using an external pilot for the VP500/700-X536 or X538, supply pressure to the external pilot via piping from a separate, stable line. Also, if the external pilot pressure is to be branched off from the same piping, in order to prevent the negative effects a pressure drop in the main piping can have on the pilot air piping, be sure to take measures such as installing a check valve on the pilot air piping after branching off, etc.

Continuous Duty

ACaution

If a valve is energized continuously for a long period of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment.

UL Approved Product

▲Caution


When conformity to UL is required, the product should be used with a UL1310 Class 2 power supply.

The product is a UL approved product only if it has a **c Ru**s mark on the body.

SMC

3-Port Solenoid Valve/ Residual Pressure Release Valve with Detection of Main Valve Position VG342-X87



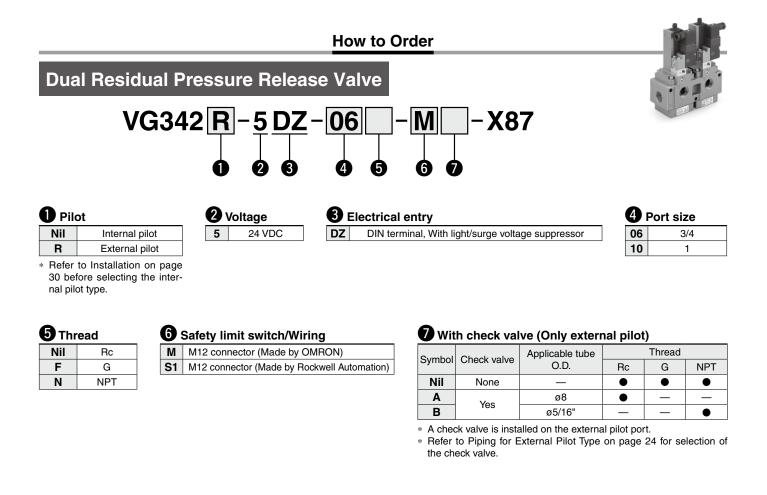


Made to Order



For details on 25A-, refer to the Web Catalog "Series Compatible with Secondary Batteries/25A- Series."

How to Order

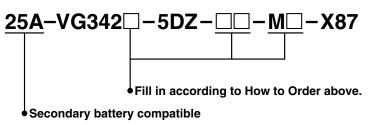

* Electrical entry can be selected only for D type. Check valve type is available only when the thread type is Rc.

SMC



Valve Specifications

			0		
Fluid	Air				
Type of actuation	N.C. (Spring return)				
Operation	Internal pilot	External pilot	18		
Operating pressure range	0.25 to 0.7 MPa	0.25 to 0.7 MPa	20		
External pilot pressure	—	0.25 to 0.7 MPa (Same as operating pressure)	VP500/70		
Maximum operating frequency	30 cycle	s/minute			
Minimum operating frequency	1 cycle	Symbols			
Operating and ambient temperatures	-10 to 50°C (No freezing)				
Ambient humidity	95% RH or less (95% RH or less (No condensation)			
Manual override	Nc	None			
Pilot exhaust	Individual exhaust				
Lubrication	Not required				
Mounting orientation	Unrestricted				
Impact/Vibration resistance	150/50 m/s ²				
Enclosure	IP40				
Operating environment	Indoors				
Weight	2.8 kg (1" type: 3.2 kg)	2.9 kg (1" type: 3.3 kg)	538		
B10D (MTTFd calculation)	1,000,00	00 cycles	×		

Internal Pilot Type

A Caution

Even when the inlet pressure is within the operating pressure range, restricted piping, etc., may cause reduced flow on the inlet side, leading to the valve not operating properly. Refer to Installation in the Specific Product Precautions for details.

Piping for External Pilot Type

▲ Caution

The product may not operate when the external pilot pressure is insufficient due to simultaneous operation or restricted air piping. In this case, use the check valve (AKH series) with the external pilot port, change the piping size or adjust the set pressure to provide a constant pressure of 0.25 MPa or more.

Flow-rate Characteristics

	Flow-rate characteristics					
Model	1→2 (P→A)			2→3 (A→R)		
Model	C [dm³/(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv
VG342-06-X87	26.6	0.04	5.5	28.6	0.03	5.6
VG342-10-X87	25.5	0.03	5.4	27.4	0.01	5.3

Solenoid Specifications

Electrical entry	DIN terminal
Rated voltage	24 VDC
Allowable voltage fluctuation	-15% to +10% of the rated voltage
Power consumption	2.2 W
Suppressor	Diode
Indicator	LED

Safety Limit Switch Specifications

Manufacturer	OMRON	Rockwell Automation
Electrical wiring	M12 connector	
Contact resistance	25 m Ω or less	50 m Ω or less
Min. applicable load	5 VDC, 1 mA (Load resistance)	5 VDC, 5 mA (Load resistance)
Max. voltage	24 VDC	
Max. load current	50 mA	
Max. load inductance	0.5 H	
Insulation voltage	300 V	600 V
Protection against electric shock	Class II (EN 60947-5-1:2004)	

Specific Product Precautions

X555 Optional Accessories Specific Product Precautions

VG342




Symbols




Symbol

Pin Numbers (Built-in switch 2 N.C.)



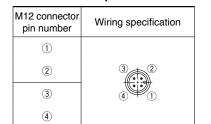


VG342(R)-X87

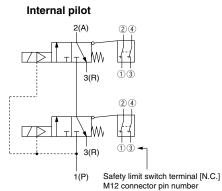


External pilot 2(A) 2 (4) 2 (4) 2 (4) 3 (R) 1 (3) X (2 (4) 3 (R) 1 (3) X (2 (4) 3 (R) 1 (3) 3 (R) 1 (3) X (1) (

External pilot/With check valve

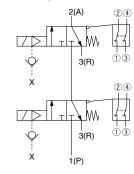


Safety limit switch Made by Rockwell Automation

 
Symbol




Pin Numbers (Built-in switch 3 N.C.)

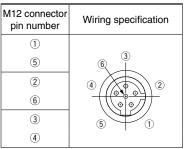


VG342(R)-X87

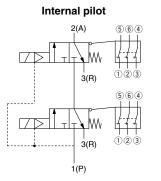

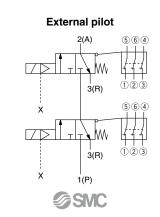


External pilot/With check valve

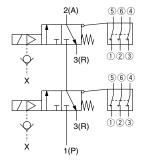


Dimensions

Dual Residual Pressure Release Valve (-X87)

 VG342-X87

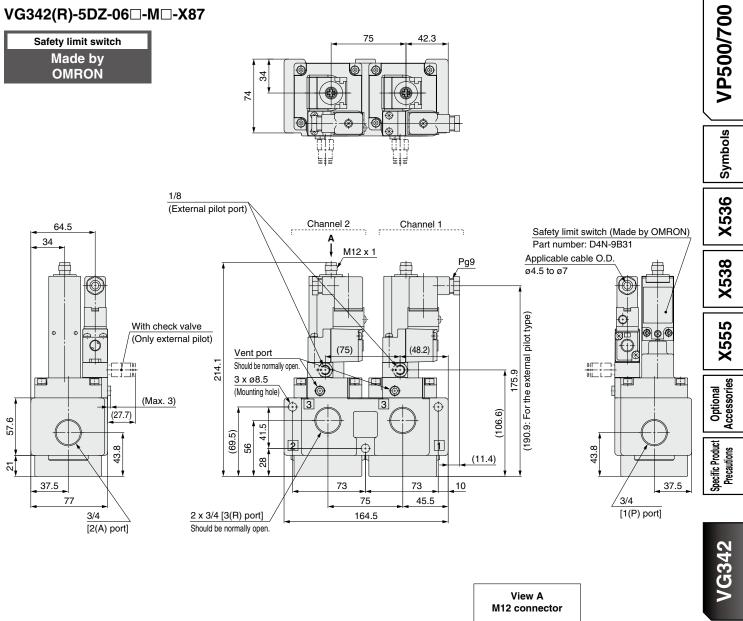







Dimensions

Dual Residual Pressure Release Valve (-X87)

 
VG342(R)-5DZ-10□-M□-X87

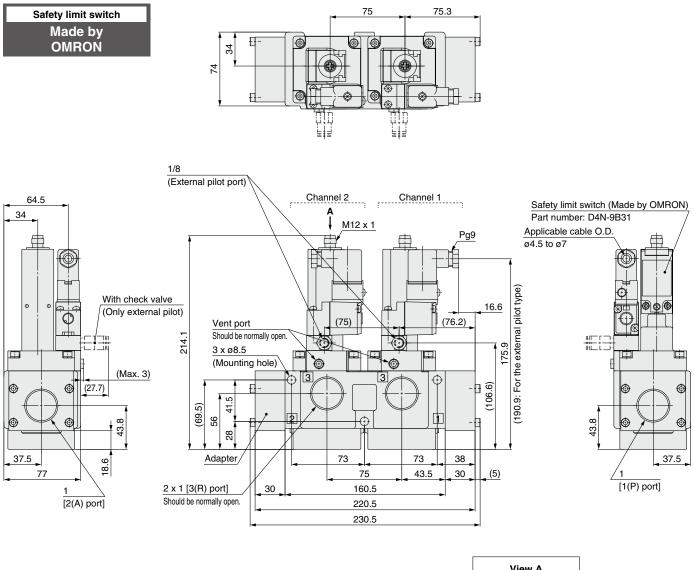




Dimensions

 Dual Residual Pressure Release Valve (-X87)

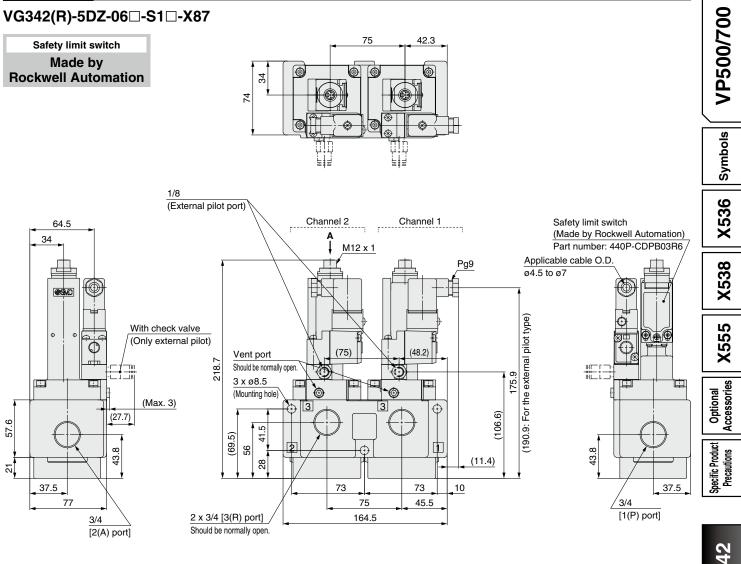





 Specific Product
 X87
 Symbols
 VG342

Dimensions

Dual Residual Pressure Release Valve (-X87)

 VG342(R)-5DZ-10□-S1□-X87

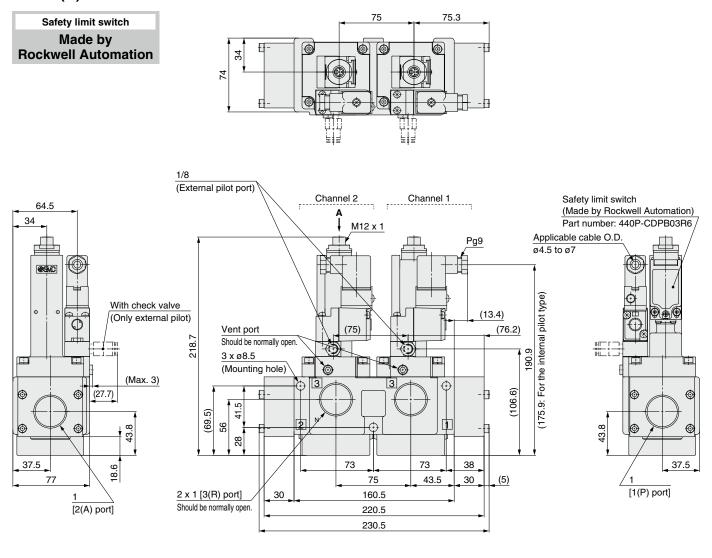



Specific Product Precautions 1

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: http://www.smcworld.com

How to Use DIN Terminal Connector

\land Caution

Connection

- 1. Loosen the holding screw and pull the connector out of the solenoid valve terminal block.
- 2. After removing the holding screw, insert a flat blade screwdriver, etc., into the notch on the bottom of the terminal block and pry it open, separating the terminal block and the housing.
- 3. Loosen the terminal screws in the terminal block. Insert the lead core wires into the terminals, and secure the wires by retightening the terminal screws.

As the product has polarity, be sure to wire the product correctly in accordance with the terminal number symbols of the terminal block while referring to the electric circuit diagram. 4. Secure the cord by fastening the gland nut.

Tighten the gland nut and holding screw within their specified torque ranges.

Changing the entry direction

After separating the terminal block and housing, the cord entry direction can be changed by rotating the housing in the opposite direction by 180°.

 Be careful not to damage the element, etc., with the cord's lead wires.

Precautions

Plug in and pull out the connector vertically without tilting it to one side.


Compatible cable

Cord O.D.: ø4.5 to ø7


(Reference) 0.5 to 1.5 mm², 2-core or 3-core, equivalent to JIS C 3306

Applicable crimped terminals

O-terminals: Equivalent to R1.25-4M defined in the JIS C 2805 Y-terminals: Equivalent to 1.25-3L made by J.S.T. Mfg. Co., Ltd. Rod-terminals: Up to size 1.5

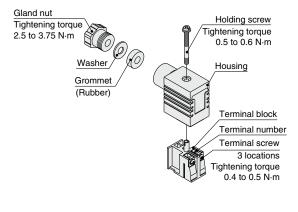

Light/Surge Voltage Suppressor

 

Limit Switch Cable

An OMRON or Rockwell Automation M12 connector limit switch cable is available.

M12 Connector Cable (4 Pins) Made by OMRON

Part number	Cable length [mm]
ZS-37-L	300
ZS-37-M	500
ZS-37-N	1000
ZS-37-P	2000
ZS-37-C	5000

Wire color by terminal no.

M12 pin no.	Lead wire color	
1	Brown	
2	White	
3	Blue	
(4)	Black	

M12 Connector Cable (6 Pins) Made by Rockwell Automation

Part number	Cable length [mm]
VP500-231-1	2000

Rockwell Automation part number: 889R-F6ECA-2

Wire color by terminal no.

M12 pin no.	Lead wire color
1	Red/White
2	Red
3	Green
(4)	Red/Yellow
5	Red/Black
6	Red/Blue

• We recommend using one of the straight type M12 connector cables shown above. If the L type is used, the M12 connector mounting port keyway position on the limit switch side differs depending on the product, so the cable entry direction will not be fixed.



X536		
X538		
X555		
Optional	Accessories	
Specific Product	Precautions	
c		

VP500/700

Symbols

Specific Product Precautions 2

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: http://www.smcworld.com

Installation

For the VG342-X87 internal pilot type, even when the inlet pressure is within the operating pressure range, restricted piping, etc., may cause reduced flow on the inlet side, leading to the valve not operating properly.

- The recommended piping size is 3/4" or larger. Also, use piping with an I.D. of 19 mm or larger.
- When selecting a regulator or a filter regulator, use piping larger than the recommended size with sufficient flow rate characteristics.
- For extended piping between the regulator and the valve (inlet piping), keep piping as short as possible (2 m or less).
- •For use under conditions other than those listed above, please use the external pilot type.

Continuous Duty

▲Caution

If a valve is energized continuously for a long period of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment.

UL Approved Product

Caution

When conformity to UL is required, the product should be used with a UL1310 Class 2 power supply.

The product is a UL approved product only if it has a **cN** us mark on the body.

▲ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "**Caution**," "**Warning**" or "**Danger**." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)^{*1}, and other safety regulations.

- Caution: indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
- Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

AWarning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

- 2. Only personnel with appropriate training should operate machinery and equipment.
 - The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.
- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
 - The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

- 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
- An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

- *1) ISO 4414: Pneumatic fluid power General rules relating to systems.
 - ISO 4413: Hydraulic fluid power General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)
 - ISO 10218-1: Manipulating industrial robots Safety. etc.

 The product is provided for use in manufacturing industries. The product herein described is basically provided for peaceful use in manufacturing industries. If considering using the product in other industries, consult SMC beforehand

and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 - 2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Revision History

Edition B * Base-mounted type (VP544-X536, VP744-X536) residual pressure release valves have been added.

- $\ast\,$ The service life of the safety limit switch made by Rockwell Automation has been changed.
- * The VG-X87 with a safety limit switch made by Rockwell Automation has been added to safety certified products.
- * A precaution regarding installation has been added to the specific product precautions.
- * Number of pages has been increased from 28 to 32. WX

A Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.